

Tillåten stämpbelastning i kN per angiven arbetshöjd

Tillåten stämpbelastning i kN per angiven arbetshöjd											
Klass	A		B			C					
Enhetsvikt (kg)	15,4	18,4	15,6	17,5	25,0	17,0	23,0	23,8	31,6	34,6	36,4
Benämning	<b>A300</b>	<b>A350</b>	<b>B300</b>	<b>B350</b>	<b>B410</b>	<b>C300</b>	<b>C350</b>	<b>C400</b>	<b>C450</b>	<b>C500</b>	<b>C550</b>
Tidigare benämning	SE300	SE350	B300	B350	DB410	D300	D350	D400	D450	D500	D550
Art. nr.	AL-A0121300C	AL-A0121350C	AL-A0006300	AL-A0006350	AL-A0006410	AL-A0004300	AL-A0004350	AL-A0004400	AL-A0004450	AL-A0004500	AL-A0004550
5,5											20,0
5,4											21,5
5,3											22,5
5,2											24,0
5,1											25,0
5,0										20,0	26,0
4,9										21,0	27,0
4,8										22,0	28,5
4,7										23,0	30,0
4,6										24,5	31,5
4,5									20,0	26,0	33,5
4,4									20,5	27,0	35,0
4,3									21,0	28,5	35,0
4,2									21,5	30,5	35,0
4,1					20,0				22,5	32,0	35,0
4,0					20,5			20,0	23,0	34,0	35,0
3,9					21,5			22,0	24,5	35,0	35,0
3,8					23,5			23,5	25,0	35,0	35,0
3,7					25,0			25,0	26,5	35,0	35,0
3,6					26,5			26,0	27,0	35,0	35,0
3,5		15,0		14,5	28,5		20,0	28,0	28,5	35,0	35,0
3,4		17,0		15,5	30,5		22,0	29,5	31,5	35,0	35,0
3,3		19,0		17,0	33,0		24,0	31,0	33,0	35,0	35,0
3,2		21,0		18,5	35,0		25,0	31,5	35,0	35,0	35,0
3,1		23,0		20,0	35,0		27,5	32,5	35,0	35,0	35,0
3,0	18,0	25,0	18,5	21,5	35,0	20,0	29,0	35,0	35,0	35,0	35,0
2,9	20,0	27,0	20,5	23,0	35,0	21,5	30,0	35,0	35,0	35,0	
2,8	21,5	29,0	23,0	24,0	35,0	23,0	31,0	35,0	35,0	35,0	
2,7	23,0	31,0	25,5	25,5	35,0	25,0	32,0	35,0	35,0	35,0	
2,6	25,0	33,0	27,5	27,0	35,0	26,0	34,0	35,0	35,0		
2,5	26,5	35,0	30,0	28,5	35,0	27,0	35,0	35,0	35,0		
2,4	28,0	35,0	32,0	30,0	35,0	28,0	35,0	35,0			
2,3	30,0	35,0	34,5	31,5	35,0	29,0	35,0	35,0			
2,2	31,5	35,0	34,5	33,0		30,5	35,0				
2,1	33,0	35,0	34,5	34,5		32,0	35,0				
2,0	35,0	35,0	34,5	36,0		35,0	35,0				
1,9	35,0		34,5			35,0					
1,8	35,0		34,5			35,0					
1,8	35,0		34,5			35,0					

Arbets höjd (m)

Tillåtna belastningar i kN. Angivelser förutsätter att stämpan används i enighet med leverantörens monteringsanvisning. Lasten måste komma centriskt ned i stämpan. Stämpan måste säkras mot horisontella förflyttningar i under- och överkant.